
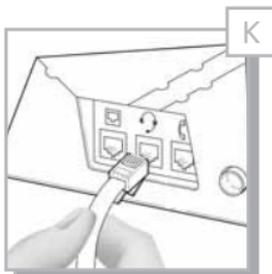
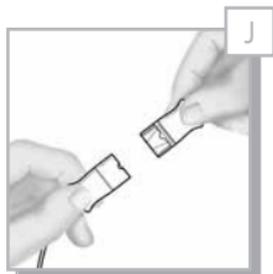
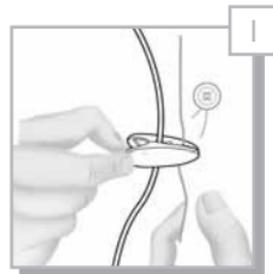
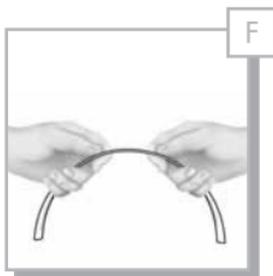
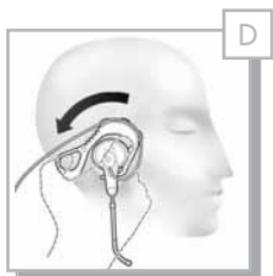
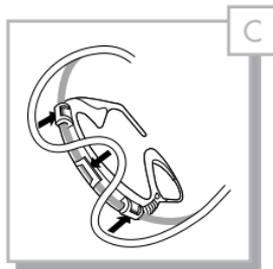
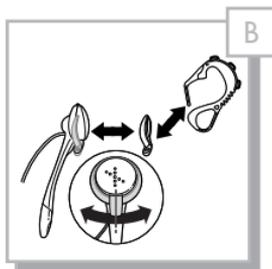




# DuoSet<sup>®</sup> Headset

Models H141/H141N/P141/P141N

## User Guide

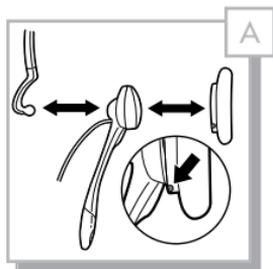

# DIAGRAM

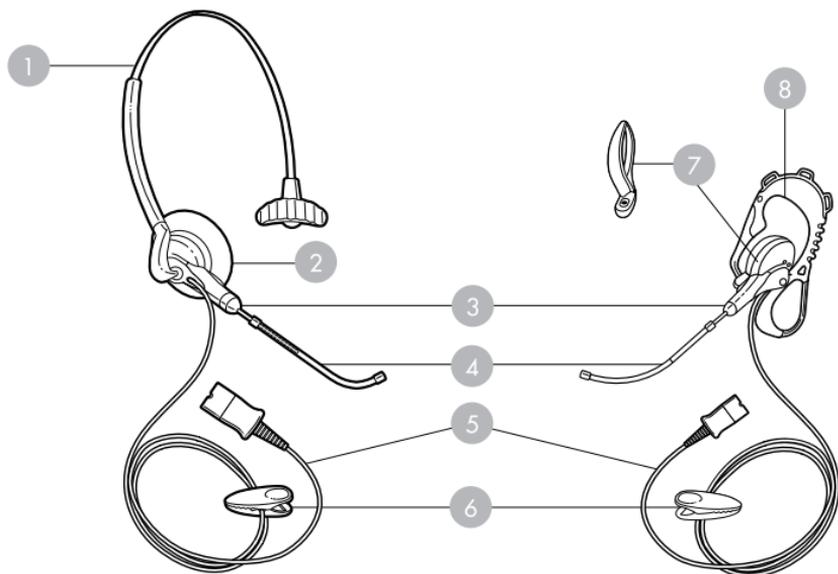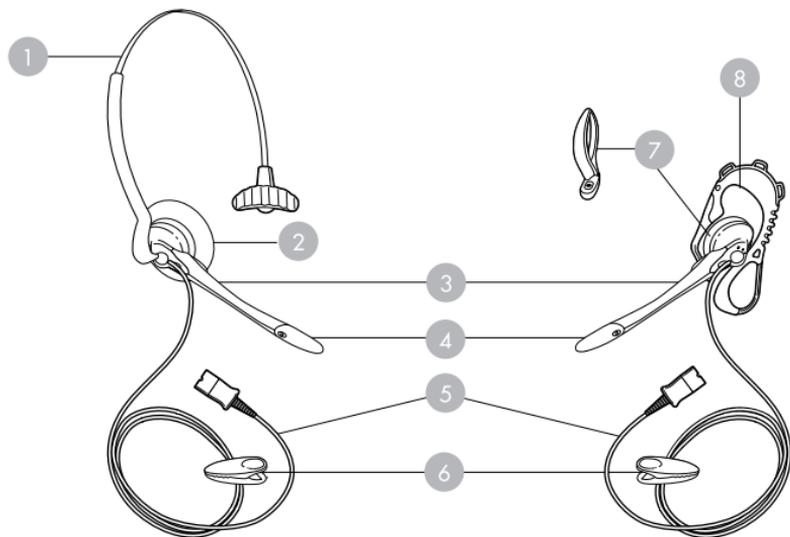

## Headset

(Both Configurations Shown)

- 1 Adjustable Headband  
(P/N 43298-01)
- 2 Ear Cushion Assembly  
(P/N 43299-01)
- 3 Headset Assembly
- 4 Voice Boom
- 5 Cord
- 6 Clothing Clip  
(P/N 43220-01)
- 7 Pivot Ball Ring  
(P/N 45650-01)
- 8 Flexible Earloop  
(P/N 45651-01)

# OVER-THE-EAR-CONFIGURATION

If already in place, unsnap the Headband ❶ from the rear of the Headset Assembly ❸.



If already in place, remove the Ear Cushion and Rubber Ring ❷ from the Headset Assembly ❸.



Press the Pivot Ball Ring ❷ onto the Headset Assembly ❸ aligning the Pivot Ball Ring with the Voice Boom ❹.



Insert the Earloop ❸ into either side of the Pivot Ball Ring ❷, depending on whether the headset is to be worn over the left or the right ear.



For added stability, press the Headset Cord ❺ under the Cord Guides on the Earloop.



Expand the Earloop around your ear as shown and release.



Rotating the Pivot Ball Ring ❷ on the Headset Assembly ❸ may provide a better fit.

# OVER-THE-HEAD CONFIGURATION

If already in place, remove the Pivot Ball Ring **7** and Earloop **8**.

Press the Ear Cushion and Rubber Ring **2** onto the Headset Assembly **3**. Align the notch in the ring with the Voice Boom **4**.

Snap the ball on the end of the Headband **1** into the socket on the rear of the Headset Assembly **3**.

Place the Headband **1** over the top of your head, with the Ear Cushion **2** resting gently against your ear and the T-Bar positioned above the opposite ear.

If the headband is too tight or too loose, grasp the metal part of headband and gently bend in the middle. The headband length may be adjusted for fit and comfort.



## POSITIONING THE BOOM

If you have the Voice Tube version of the product, pull-out, push-in, rotate, or swivel the Voice Boom ④ into a position near the corner of your mouth that best transmits your voice.



If you have the Noise-Canceling version of the product, position the tip of the Voice Boom ④ as near to the corner of your mouth as you comfortably can.



## SECURING THE HEADSET

Attach the Clothing Clip **6** at about chest level. The clip keeps the headset properly seated and free of the weight of the Headset Cable **5**. This is particularly important in the Earloop configuration.



## Using the Quick Disconnect™ Module

Use the Quick Disconnect (QD) Module to place a call on hold and move away from the phone without removing the headset.

To put your call on hold, grasp the QD Module as shown and pull straight apart.



To resume your conversation, reconnect the two halves.

## Polaris™ Headset Variations

Polaris Headset Variations, designed for use with phones with a clearly marked headset jack, do not require an Amplifier. Insert the Polaris connector directly into the headset jack. Consult your telephone's instruction manual for more information.



## For Non Polaris Versions

You are now ready to install the Amplifier.

## **CALLERS CANNOT HEAR ME**

---

For Voice Tube models, determine if the Voice Tube is clogged or positioned improperly.

For Noise-Canceling models, make sure the microphone is positioned properly at the corner of your mouth.

If you have a separate Amplifier, verify that the Speak Volume is set properly.

If you have a separate Amplifier, verify that the Mute function has not been activated.

## **I CANNOT HEAR CALLERS**

---

Verify that the Quick Disconnect™ Module is connected.

Make sure the Headset Assembly is centered on your ear.

If you have a separate Amplifier, verify that it is installed correctly.

If you have a separate Amplifier, verify that the Listen Volume is set properly.

## **EARLOOP IS UNSTABLE**

---

Experiment with the insertion of the Earloop into the Pivot Ball Ring.

Rotate the Pivot Ball Ring on the Headset Assembly.

If a comfortable fit cannot be achieved using the Earloop, consider using the Headband.

## **PLANTRONICS HELP DESK**

---

The Plantronics Help Desk is ready to assist you!

Dial 1-800-544-4660 Monday through Friday 8:00 A.M. to 5:00 P.M. Pacific Standard Time or visit our website at

**[www.plantronics.com](http://www.plantronics.com)**.

# SUPPLIES AND ACCESSORIES

For information on supplies and accessories, call Plantronics at 1-800-544-4660 or visit our website at [www.plantronics.com](http://www.plantronics.com). See also Diagram Key for additional part numbers.

## Cushions (2) (P/N 43937-01)

Replace when torn or soiled.




## Earloops (3 Sizes) (P/N 43297-01)

Non-flexible earloops offer fit variations.



## Extension Cord (P/N 40711-01)

Increase mobility in your work area; lets you stay on the line while moving away from the amplifier.

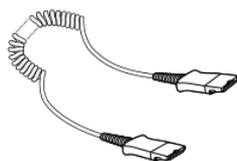

## Voice Tube (P/N 29960-01)

Replace if clogged or damaged.

