


# Cisco Phones Headset Installation



Cisco 7960

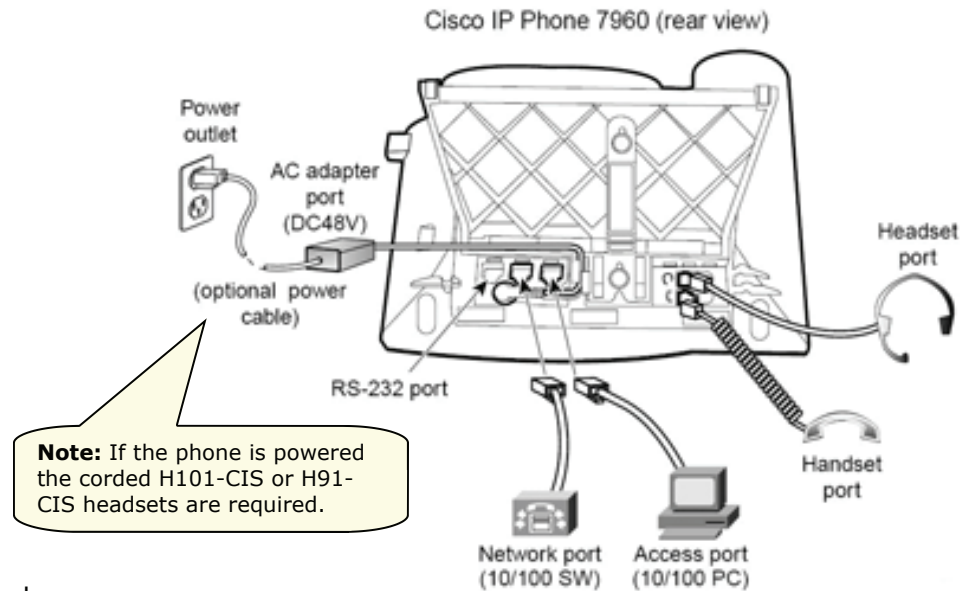

## Plantronics Wired Headset

The Cisco phone does not require an audio processor.

1. Install the cable p/n 26716-01 into the headset port.
2. Connect your Plantronics headset to the cable
3. Initiate/Terminate calls via the headset button on the phone.

If you previously used a M12 Plantronics audio processor, you may use the long curled cable from the audio processor.

## Plantronics Wireless Headsets

### If using the HL10 headset Lifter

- Do not install the headset remote base unit into the "headset port".
  1. Install the Cisco handset into the Plantronics remote unit. Leave the "headset port" empty.
  2. Install the headset remote base unit into the handset port of the Cisco phone.
  3. Answer/End calls by pressing the call control button on the headset. All headset settings are factory default.

### If NOT using the HL10 headset Lifter

1. Install the headset remote base unit into the "headset port" on the Cisco phone. Do not unplug the phones handset.
2. Switch the compatibility dial on the left side of the base unit to position 4 and the Tx switch to position "A".
3. Switch the "Intellistand" setting on the right side of the remote base unit to the down position. (The "=" sign)
4. Answer/End calls by lifting the headset out of the base and press the headset button on the phone.

7902, 7905G, 7910G+SW, 7912G - Low end phones no built-in headset port  
7940, 7960, 7970G - High end phones with built in headset port  
7920 - 802.11b wireless phone with built-in headset port